

FIREFALL INSTALLATION INSTRUCTIONS




#1. With flex hose attached to pump, place in well and place screen on top of well.



#2. Place body onto hearth and bolt together.



#3. Attaching plumbing.

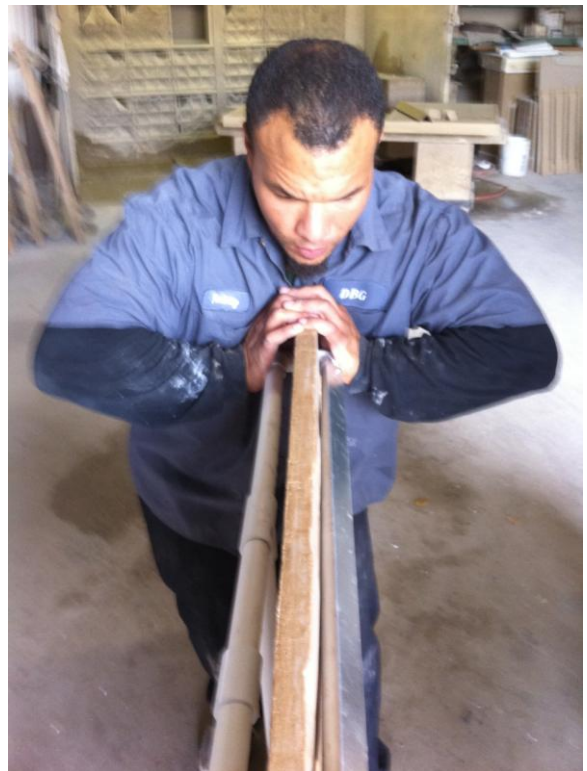

#4. Attach plumbing by squeezing connections together. Do NOT caulk so connections can be taken apart later if needed.

FIREFALL INSTALLATION INSTRUCTIONS



#5. Run bead of caulking on both inside edges. Also run caulking on bottom CORNER of water wall where wall sits on top of hearth.



#6. Attach water wall and secure wall with four (4) bolts. Clean any excess caulking at this time. NOTE: SNUG ALL 4 BOLTS EVENLY to avoid damage to structure.



#7. Put in burner and attach gas lines. CAULK under burner so water can't escape from underneath burner area.



#8. Place wedges as shown to secure plumbing in proper position.

FIREFALL INSTALLATION INSTRUCTIONS



#9. Fill the well with water. Turn unit on and set ball valve to avoid excessive splashing.



#10. If a back was ordered, attach it now.



#11. Cover burner and screen with glass, and you are ready to ENJOY!



#12. This picture shows access door to tank. TO CHECK WATER LEVEL, move glass aside and slide open door.

FIREFALL INSTALLATION INSTRUCTIONS

ENJOY!



SE-9691



SE-9696

Firesidexpressions

CARE & MAINTENANCE

Thank you for purchasing one of our Exterior Fire Products..

Your exterior fireplace requires very little care.

CLEANING:

Because the fireplace is constructed from GFRC, a concrete product, and the color is CAST all the way through, you can clean the unit like you would other concrete surfaces.

- * The fireplace can be hosed off to remove most of the dust.
- * Before re-sealing or to remove stubborn stains, the entire fireplace should be thoroughly cleaned. Use CLR, a concrete cleaner which can be purchased from Home Depot, and a nylon scrub brush, taking care to rise off the residue. Follow the instruction on the package!

RE-SEALING:

Your fireplace comes from the factory sealed with multiple coats of a non-glossy, penetrating concrete sealer.

Application of a similar product semi-annually is recommended, however there is nothing that can protect against pollution and/or acid rain which could stain the finish.

For best results, perform during cooler AM/PM temperatures:

- *Clean the entire fireplace with CLR (information above).
- *Allow fireplace to dry completely.
- *Apply masonry sealer to entire fireplace (a sponge works well for this application).

SCREEN:

If you have purchased a screen, although it has been powder-coated, it is still an iron product. During long periods of moisture, screens should be stored away from the elements. If areas of rust occur, they can be treated with any exterior rust-proof flat-black paint.

* FIREFALLS:

Please see "CLEANING" above for maintenance on the exterior.

It is necessary to keep the water level above the pump. To view water level, access the reservoir through the trap door on the left side. Move the glass aside then slide away door in screen.

Distilled Water is recommended OR Algaecide & De-Lime products for *Fountains* should be used to control algae & lime.

In freeze-thaw areas, the fireplace must be covered to keep the elements from collecting inside of the fireplace.

Our fireplaces are designed to utilized gas as the fuel source. Wood-burning will void the warranty.

Please contact the office at 814-723-9394 for any further assistance.

Enjoy your fireplace!

814-723-9394
814-723-4187/fax

www.firesidexpressions.com

21701 Route 6
Warren, PA 16365